

Вакуумные переходные фитинги КА

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47


Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Vacuum Adapter Fittings

- ❖ KF, CF to NPT, BSPT, GFS, Hikelok tube fitting
- ❖ Copper seal vacuum range: $\geq 10^{-12}$ Torr
- ❖ Elastomeric seal vacuum range: $\geq 10^{-8}$ Torr
- ❖ Copper seal working temperature from -325°F to 842°F (-200°C to 450°C)
- ❖ Elastomeric seal working temperature from -4°F to 302°F (-20°C to 150°C)


Dimensions

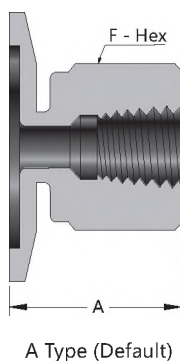

KF to Female NPT


Pipe Size in.	Flange Size	Basic Ordering Number (For A Type)	A in. (mm)	F in. (mm)
1/8	KF10	KF10-KA-FNPT2-	0.92(23.4)	9/16(14.3)
	KF16	KF16-KA-FNPT2-		
	KF25	KF25-KA-FNPT2-		
	KF40	KF40-KA-FNPT2-		
	KF50	KF50-KA-FNPT2-		
1/4	KF10	KF10-KA-FNPT4-	1.07(27.2)	3/4(19.1)
	KF16	KF16-KA-FNPT4-		
	KF25	KF25-KA-FNPT4-		
	KF40	KF40-KA-FNPT4-		
	KF50	KF50-KA-FNPT4-		
1/2	KF16	KF16-KA-FNPT8-	1.44(36.6)	1 1/16(27.0)
	KF25	KF25-KA-FNPT8-	1.39(35.3)	
	KF40	KF40-KA-FNPT8-		
	KF50	KF50-KA-FNPT8-		
3/4	KF25	KF25-KA-FNPT12-	1.45(36.8)	1 5/16(33.3)
	KF40	KF40-KA-FNPT12-		
	KF50	KF50-KA-FNPT12-		
1	KF25	KF25-KA-FNPT16-	1.57(39.9)	1 5/8(41.3)
	KF40	KF40-KA-FNPT16-		
	KF50	KF50-KA-FNPT16-		

KF to Tube Fitting

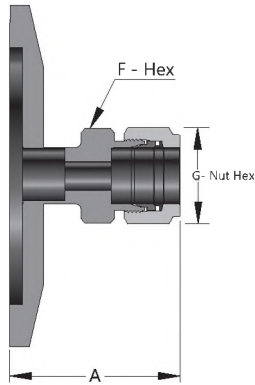


Tube O.D. (in.)	Flange Size	Basic Ordering Number	A in.(mm)	F in.(mm)	G in.(mm)
1/4	KF10	KF10-KA-F4-	1.47(37.3)	1/2(12.7)	9/16(14.3)
	KF16	KF16-KA-F4-			
	KF25	KF25-KA-F4-			
	KF40	KF40-KA-F4-			
	KF50	KF50-KA-F4-			
3/8	KF10	KF10-KA-F6-	1.63(41.4)	5/8(15.9)	11/16(17.5)
	KF16	KF16-KA-F6-			
	KF25	KF25-KA-F6-			
	KF40	KF40-KA-F6-			
	KF50	KF50-KA-F6-			
1/2	KF25	KF25-KA-F8-	1.77(45.0)	13/16(20.6)	7/8(22.2)
	KF40	KF40-KA-F8-			
	KF50	KF50-KA-F8-			
3/4	KF25	KF25-KA-F12-	2.14(54.4)	1 1/16(27.0)	1 1/8(28.6)
	KF40	KF40-KA-F12-			
	KF50	KF50-KA-F12-			
1	KF25	KF25-KA-F16-	2.60(66.0)	1 3/8(34.9)	1 1/2(38.1)
	KF40	KF40-KA-F16-			
	KF50	KF50-KA-F16-			

KF to Rotatable Male GFS Metal

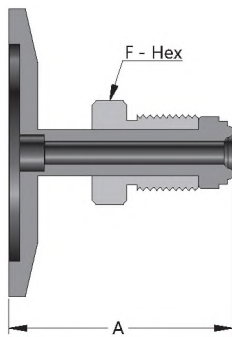


GFS Size (in.)	Flange Size	Basic Ordering Number	A in.(mm)	F in.(mm)
1/4	KF10	KF10-KA-RGFS4-	1.46(37.1)	5/8(15.9)
	KF16	KF16-KA-RGFS4-		
	KF25	KF25-KA-RGFS4-		
	KF40	KF40-KA-RGFS4-		
	KF50	KF50-KA-RGFS4-		
3/8	KF16	KF16-KA-RGFS6-	1.65(41.9)	11/16(17.5)
	KF25	KF25-KA-RGFS6-	1.55(39.4)	
	KF40	KF40-KA-RGFS6-		
	KF50	KF50-KA-RGFS6-		
1/2	KF16	KF16-KA-RGFS8-	1.65(41.9)	15/16(23.8)
	KF25	KF25-KA-RGFS8-	1.55(39.4)	
	KF40	KF40-KA-RGFS8-		
	KF50	KF50-KA-RGFS8-		
3/4	KF25	KF25-KA-RGFS12-	2.15(54.6)	1 5/16(33.3)
	KF40	KF40-KA-RGFS12-	2.05(52.1)	
	KF50	KF50-KA-RGFS12-		
1	KF25	KF25-KA-RGFS16-	2.26(57.4)	1 5/8(41.3)
	KF40	KF40-KA-RGFS16-		
	KF50	KF50-KA-RGFS16-		

KF to Vacuum Tube Fitting

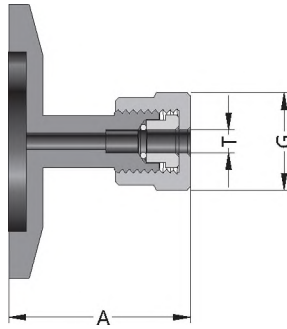

Tube O.D. (in.)	Flange Size	Basic Ordering Number	A in.(mm)	G in.(mm)
1/4	KF10	KF10-KA-VF4-	1.48(37.6)	11/16(17.5)
3/8		KF10-KA-VF6-	1.62(41.1)	13/16(20.6)
1/4	KF16	KF16-KA-VF4-	1.48(37.6)	11/16(17.5)
3/8		KF16-KA-VF6-	1.62(41.1)	13/16(20.6)
1/2		KF16-KA-VF8-	1.79(45.5)	15/16(23.8)
1/4	KF25	KF25-KA-VF4-	1.48(37.6)	11/16(17.5)
3/8		KF25-KA-VF6-	1.62(41.1)	13/16(20.6)
1/2		KF25-KA-VF8-	1.79(45.5)	15/16(23.8)
3/4		KF25-KA-VF12-	1.93(49.0)	1 1/4(31.8)
1/4	KF40	KF40-KA-VF4-	1.48(37.6)	11/16(17.5)
3/8		KF40-KA-VF6-	1.62(41.1)	13/16(20.6)
1/2		KF40-KA-VF8-	1.79(45.5)	15/16(23.8)
3/4		KF40-KA-VF12-	1.93(49.0)	1 1/4(31.8)
1		KF40-KA-VF16-	1.95(49.5)	1 9/16(39.7)
1/4	KF50	KF50-KA-VF4-	1.48(37.6)	11/16(17.5)
3/8		KF50-KA-VF6-	1.62(41.1)	13/16(20.6)
1/2		KF50-KA-VF8-	1.79(45.5)	15/16(23.8)
3/4		KF50-KA-VF12-	1.93(49.0)	1 1/4(31.8)
1		KF50-KA-VF16-	1.95(49.5)	1 9/16(39.7)

KF to Female GFS Metal Gasket

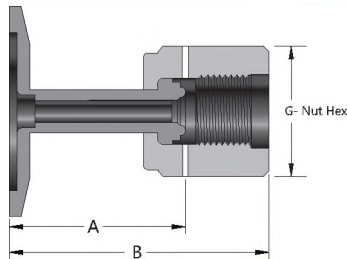

GFS Size in.	Flange Size	Basic Ordering Number	A in.(mm)	B in.(mm)	G in.(mm)
1/4	KF10	KF10-KA-FGFS4-	1.46(37.1)	1.96(49.8)	3/4(19.1)
	KF16	KF16-KA-FGFS4-			
	KF25	KF25-KA-FGFS4-			
	KF40	KF40-KA-FGFS4-			
	KF50	KF50-KA-FGFS4-			
1/2	KF16	KF16-KA-FGFS8-	1.65(41.9)	2.21(56.1)	1 1/16(27.0)
	KF25	KF25-KA-FGFS8-			
	KF40	KF40-KA-FGFS8-			
	KF50	KF50-KA-FGFS8-			

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93